

SAMSUNG

WASHING MACHINE TOP-LOADING TYPE

Basic Name : WA48H7400AW
(WA7000H PJT)
Basic Code : WA48H7400AW/A2
Model Name : WA48J7700AW
WA48J7770AP
WA48J7770AW
(WA7700J PJT)
Model Code : WA48J7700AW/A2
WA48J7770AP/A2
WA48J7770AW/A2

SERVICE Manual

WASHING MACHINE (TOP-LOADING)



CONTENTS

1. Safety Instructions
2. Features and Specifications
3. Disassembly and Reassembly
4. Troubleshooting
5. PCB Diagram
6. Wiring Diagram
7. Reference

CONTENTS

1. Safety instructions	1
1-1. Safety instructions for service engineers	1
2. Features and Specifications	5
2-1. Features	5
2-2. Specifications	6
2-3. Detail features	7
2-4. Options specifications	8
3. Disassembly and Reassembly	9
3-1. Tools for disassembly and reassembly	9
3-2. Standard disassembly drawings	10
4. Troubleshooting	19
4-1. Error modes	19
4-2. Corrective actions for each error code	23
4-3. The installation for leveling	27
5. PCB diagram	29
5-1. Main PCB	29
5-2. Detailed Manual for Connector and Relay Terminal Part - Main PCB	30
5-3. Sub PCB	31
5-4. Detailed Manual for Connector Terminal Part - Sub PCB	32
6. Wiring diagram	33
6-1. Wiring diagram	33
7. Reference	34
7-1. Model Number Naming Rules	34

1. SAFETY INSTRUCTIONS

1-1. SAFETY INSTRUCTIONS FOR SERVICE ENGINEERS

- ▶ Be sure to observe the following instructions to operate the product correctly and safely to prevent possible accidents and hazards while servicing.
 - ▶ Two types of safety symbols, Warning and Caution, are used in the safety instructions.
-




Hazards or unsafe practices that may result in severe personal injury or death.




Hazards or unsafe practices that may result in minor personal injury or property damage.

WARNING BEFORE SERVICING


- (When servicing electrical parts or harnesses) Make sure to disconnect the power plug before servicing.
 - ▶ Failing to do so may result in a risk of electric shock.
 - Do not allow consumers to connect several appliances to a single power outlet at the same time.
 - ▶ There is a risk of fire due to overheating.
-

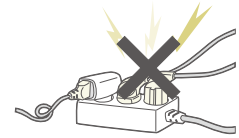

- When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet.
 - ▶ Failing to do so may damage the plug and result in fire or electric shock.
-

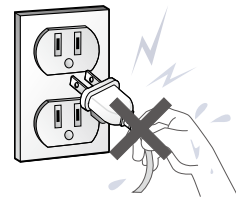

- When the washing machine is not being used, make sure to disconnect the power plug from the power outlet.
 - ▶ Failing to do so may result in electric shock or fire due to lightning.
-

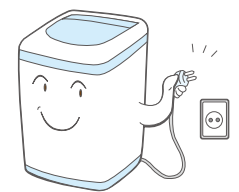

- Do not place or use gasoline, thinners, alcohol, or other flammable or explosive substances near the washing machine.
 - ▶ There is a risk of explosion and fire caused from electric sparks.
-



WARNING WHILE SERVICING

- Check if the power plug and outlet are damaged, flattened, cut or otherwise degraded.
 - ▶ If faulty, replace it immediately.
Failing to do so may result in electric shock or fire.
- Completely remove any dust or foreign material from the housing, wiring and connection parts.
 - ▶ This will prevent a risk of fire due to tracking and electrical hazard..
- When connecting wires, make sure to connect them using the relevant connectors and check that they are completely properly.
 - ▶ If tape is used instead of the connectors, it may cause fire due to tracking.
- Make sure to discharge the PBA power terminals before starting the service.
 - ▶ Failing to do so may result in a high voltage electric shock.
- When replacing the heater, make sure to fasten the nut after ensuring that it is inserted into the bracket-heater.
 - ▶ If not inserted into the bracket-heater, it touches the drum and causes noise and electric leakage.




WARNING AFTER SERVICING

- Check the wiring.
 - ▶ Ensure that no wire touches a rotating part or a sharpened part of the electrical harness.
- Check for any water leakage.
 - ▶ Perform a test run for the washing machine using the standard course and check whether there is any water leakage through the floor section or the pipes.
- Do not allow consumers to repair or service any part of the washing machine themselves.
 - ▶ This may result in personal injury and shorten the product lifetime.




- If it seems that grounding is needed due to water or moisture, make sure to run grounding wires.
(Check the grounding of the power outlet, and additionally ground it to a metallic water pipe.)
 - ▶ Failing to do so may result in electric shock due to electric leakage.

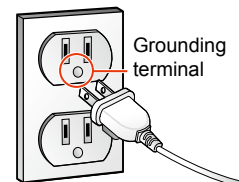

[Running a grounding wire]

- Twist a grounding wire (copper wire) two or three times around the tap.
- If you connect the grounding wire to a copperplate, bury it 75 cm under the earth in a place with a lot of moisture.
 - ⚠ Do not connect the grounding wire to a gas pipe, plastic water pipe or telephone wire. There is a risk of electric shock or explosion.

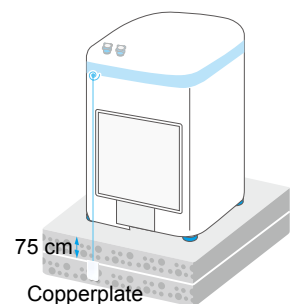

**CAUTION****BEFORE SERVICING**

- Do not sprinkle water onto the washing machine directly when cleaning it.
 - ▶ This may result in electric shock or fire, and may shorten the product lifetime.




- Do not place any containers with water on the washing machine.
 - ▶ If the water is spilled, it may result in electric shock or fire. This will also shorten the product lifetime.



- Do not install the washing machine in a location exposed to snow or rain.
 - ▶ This may result in electric shock or fire, and shorten the product lifetime.



- Do not press a control button using a sharp tool or object.
 - ▶ This may result in electric shock or damage to the product.

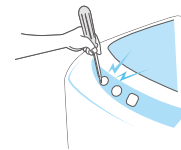**CAUTION****WHILE SERVICING**

- When wiring a harness, make sure to seal it completely so no liquid can enter.
 - ▶ Make sure that they do not break when force is exerted.

- Check if there is any residue that shows that liquid entered the electric parts or harnesses.
 - ▶ If any liquid has entered into a part, replace it or completely remove any remaining moisture from it.

- If you need to place the washing machine on its back for servicing purposes, place a support(s) on the floor and lay it down carefully so its side is on the floor.
 - ▶ Do not lay it down on its front. This may result in the inside tub damaging parts.

**CAUTION****AFTER SERVICING**

- Check the assembled status of the parts.
 - ▶ Now is a good time to inspect your work. Review all connections and wiring, including mounting hardware.
- Check the insulation resistance.
 - ▶ Disconnect the power cord from the power outlet and measure the insulation resistance between the power plug and the grounding wire of the washing machine. The value must be greater than 10M Ω when measured with a 500V DC Megger
- Check whether the washing machine is level the floor with respect to the original position of the washing machine prior to service.
By doing this now will reduce for the need of customer dissatisfaction and redo call.
 - ▶ Vibrations can shorten the lifetime of the product.





2. FEATURES AND SPECIFICATIONS

2-1. FEATURES



Features	Description
The Great Capacity	<ul style="list-style-type: none">• Even bulky garments and blankets get super clean. The Great capacity leaves enough room for a more thorough, cleaner wash.
AquaJet™	<ul style="list-style-type: none">• AquaJet™ washes loads gently and more thoroughly than conventional top loaders. Sprayed water allows detergent to distribute evenly and penetrate fabrics faster and deeper. AquaJet™ delivers improved cleanliness and advanced fabric care.
DD Motor	<ul style="list-style-type: none">• The power to handle anything! Our direct-drive inverter motor delivers power right to the washer tub from a variable speed, reversible motor. Beltless direct-drive motor generates a higher spin speed for more effective, quiet operation. The washer also has fewer moving parts, meaning fewer repairs.
Mist Shower	<ul style="list-style-type: none">• A separate nozzle has been adopted that sprays water equally so that the rinse cycle is effective even with a small amount of water.
VRT® (Vibration Reduction Technology)	<ul style="list-style-type: none">• This Samsung washer performs smoothly at top spin speeds, minimizing noise and vibration.
Eco Plus	<ul style="list-style-type: none">• If you select this option, the water temperature is set to slightly lower than during the normal wash course to save energy.
Self Clean (Tub Cleaning cycle)	<ul style="list-style-type: none">• Clean your drum with one button! This Pure Cycle is specially designed to remove detergent residue & dirt build up in the tub, without the need for special chemical detergents.
EZ-Closed Lid	<ul style="list-style-type: none">• The door is designed to close softly and prevent users from being injured
My Cycle	<ul style="list-style-type: none">• This is a convenient function that enables you to save a frequently-used wash course. Once this is set, you can do a wash simply by pressing the Power, My Cycle and Start buttons in this sequence.
Smart Care	<ul style="list-style-type: none">• Samsung's Smart Care, an automatic Check-monitoring system, detects and diagnoses problems at an early stage and provides quick and easy solutions.
Prewash (Water Jet & Built-in sink)	<ul style="list-style-type: none">• Water Jet and Built-in sink help you handwash before the washing machine starts operation. Water Jet is available only when the door is open with the water level set to less than High. For prewashing, use the Built-in sink that is designed to facilitate the hand-wash.

2-2. SPECIFICATIONS


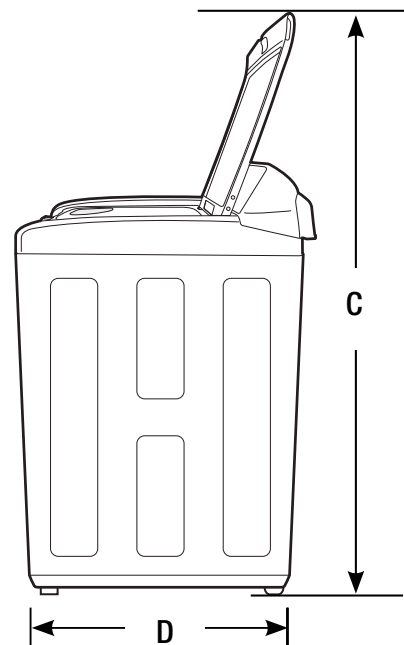
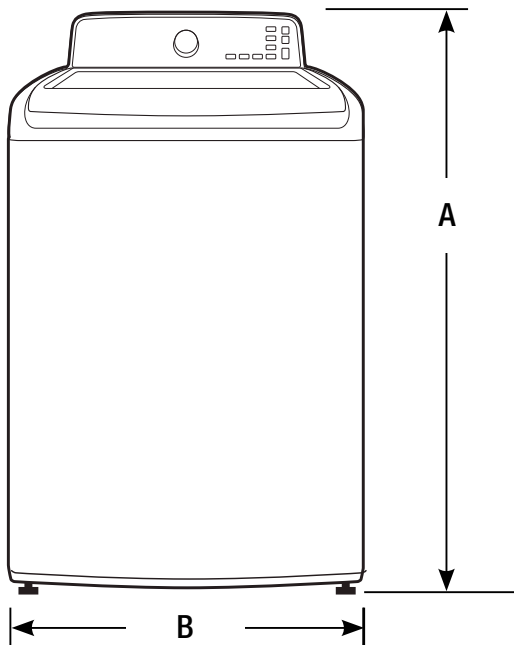


TYPE		TOP LOADING WASHER	
DIMENSION (Inches / cm)	A. Height	43.9" / 111.5cm	
	B. Width	27.0" / 68.6cm	
	C. Height with Door open	58.1" / 147.6cm	
	D. Depth	29.3" / 74.4cm	
WATER PRESSURE		20~116psi (137~800kPa)	
WEIGHT		64.0 kg (141.1 lb)	
CAPACITY		4.8cu.ft	
POWER CONSUMPTION	WASHING	120V	700W
	SPIN	120V	400W
	DRAIN	120V	80W
SPIN REVOLUTION		1,100rpm	




2-3. DETAIL FEATURES

Grade		WA48J7700A* WA48J7770A*		WA48H7400AW	
Image					
Main Spec.	Capacity(DOE)	4.8		4.8	
	Aqua Jet™	Yes		Yes	
	Smart Care	Yes		Yes	
	Diamond interior drum	Yes		Yes	
	Self Clean	Yes		Yes	
	Washing Cycles	11		11	
	Internal Heater	-		-	
	VRT®	Yes		Yes	
	Pulsator material	STS		STS	
	Max rpm (Max spin speed)	1,100		1,100	
	Mist Shower	Yes		Yes	
	Motor	DD		DD	
	Design	Color	White Inox		Neat White
Main display		18:88		18:88	
Jog Dial		Chrome		Chrome	
LED color		Ice-blue		Ice-blue	
Door Lid TC		Transparent Glass		Tempered Tinted glass	
Easy door		Yes		Yes	
Top Cover		Steel(EGI) + Painting		Steel(EGI) + Painting	
Energy	Estimated Yearly Operating Cost (when used with an electric water heater)		\$15	Estimated Yearly Energy Cost (when used with an electric water heater)	\$17
	Estimated Yearly Electricity Use		129 kWh	Estimated Yearly Electricity Use	145 kWh
	Estimated Yearly Operating Cost (when used with a natural gas water heater)		\$9	Estimated Yearly Energy Cost (when used with a natural gas water heater)	\$11

2-4. OPTIONS SPECIFICATIONS

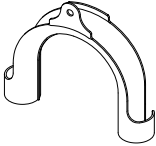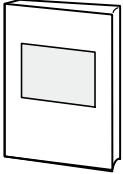


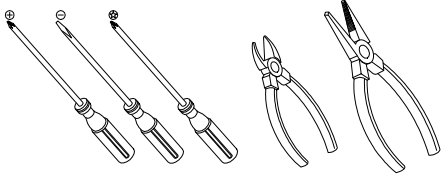
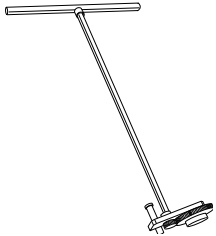
Item	Item Name	Code No.	Remark
	HOSE-HANGER	DC61-00224A	Default
	MANUAL-BOOK	DC68-03132L	Default
	CABLE TIE	6501-000121	Default
	ASSY CAP V.W	DC97-18313A	Default
	ASSY-LEG SUPPORT	DC97-14095A	Service

 Note

- Customer can purchase Water supply, drain hoses and assy leg support from a service center.



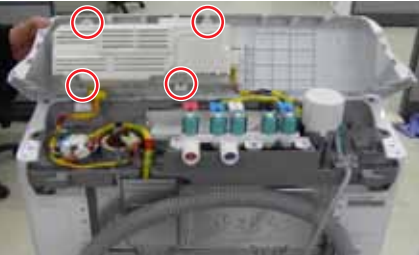

3. DISASSEMBLY AND REASSEMBLY



3-1. TOOLS FOR DISASSEMBLY AND REASSEMBLY

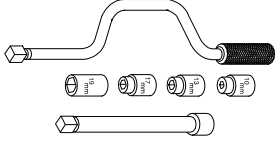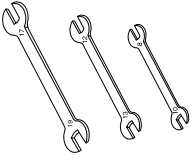
Tool	Type	Remarks
	Box driver	10mm 17mm Tub(16), Fixer screw(5), Motor(1), Balance(5) Damper(2), Damper(friction 1)
	Double-ended spanner	10mm 17mm Replaced by box driver Leg
	Vice pliers	A Tool for protecting empty turning of bolt or abrasion from using box driver For disassembly of Spin drum
	Others (screwdriver, nipper, long nose pliers)	Common tools for servicing
	JIG for the ASSY SPIN BASKET	



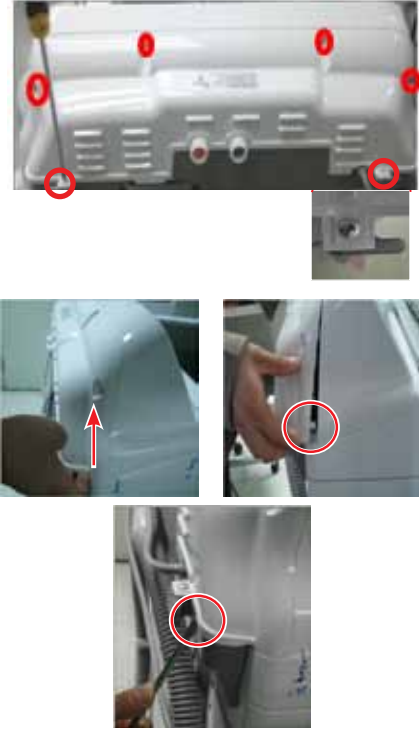


3-2. STANDARD DISASSEMBLY DRAWINGS

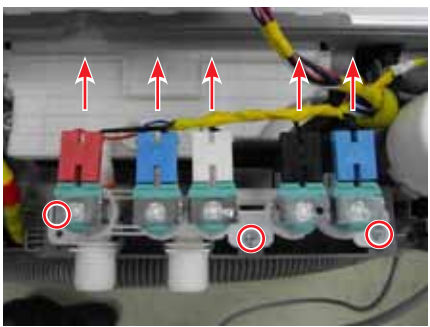

- ▶ This is a standard disassembly diagram and may differ from the actual product.
Use this material as a reference when disassembling and reassembling the product.





Part	Figure	Description
		<ol style="list-style-type: none"> 1. Remove the 6 screws holding the control panel assembly. 2. Separate the both hooks. (Left and Right) 3. Separate the cover panel upward. <ul style="list-style-type: none"> ☑ If it is difficult to disassemble, use the (-) driver to disassemble hooks. (Be careful damage of hooks.)
Sub and Main PCB Assembly		<ol style="list-style-type: none"> 4. Remove the 2 screws holding the control panel assembly and turn the panel over.
		<ol style="list-style-type: none"> 5. Pull the Encoder-Knob to separate it and then remove the 4 fixing screws. <ul style="list-style-type: none"> ☑ When reassembling the PCB, take care that you do not damage the control-panel fixing hook. After replacing the sub PCB, check the key operation.
		<ol style="list-style-type: none"> 6. Separate the cover pcb(m) and the wires connected to the main PBA. <ul style="list-style-type: none"> ☑ After reassembling the housing, check if the wires are properly connected. When disassembling and reassembling the housing, take care that you do not damage the part.


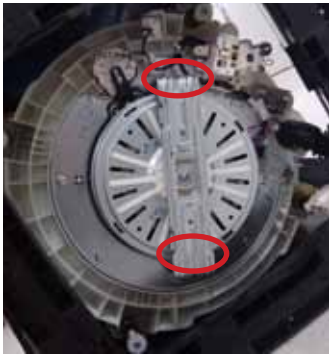


Part	Figure	Description
Water Valve		<ol style="list-style-type: none"> 1. After separating the control panel, separate the water-valve housing. 2. Remove the 3 fixing screws.
		<ol style="list-style-type: none"> 3. Remove the wire-harness and release the 2 clamps connecting the hoses. <ul style="list-style-type: none"> <input checked="" type="checkbox"/> When releasing the clamps, take care that you do not tear the hoses.



Part	Figure	Description
<p>Door Assembly</p>		<ol style="list-style-type: none"> 1. Remove the 2 inlay tapes. 2. Remove the 4 screws holding the door lid TC and separate the door.


Part	Figure	Description
Top Cover Assembly / Door Switch		<ol style="list-style-type: none"> 1. Remove the 2 screws from the cover plate. 2. Separate the control panel assembly.
		<ol style="list-style-type: none"> 3. Separate the Assy Valve Water, the main PBA, the Assy Sensor Pressure and the filter EMI housing. <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Separate the housing to prevent stress and damage to the wire-harness. 4. Separate the main wire harness, the pressure switch hose clip , Grounding screw . 5. Release the bleach hose clamp.
		<ol style="list-style-type: none"> 6. Separate the top cover assembly by lifting and pushing ahead the top part of the assembly. 7. you can check the door switch If turn the Top cover upside down.
Sensor Pressure Switch		<ol style="list-style-type: none"> 1. Disassemble the control panel assembly. 2. Separate the pressure switch housing.
		<ol style="list-style-type: none"> 3. Before separating the hose, release the clip. <ul style="list-style-type: none"> <input checked="" type="checkbox"/> When releasing the clip, take care that you do not tear the hose.

Part	Figure	Description
<p>Drain-Pump</p>		<ol style="list-style-type: none"> 1. Separate the back cover 2. Separate 2 clamps. 3. Remove the 13 screws in base. 4. Remove the 3 screws 5 screws are separated by '+' shape hand driver.
<p>Thermistor</p>		<ol style="list-style-type: none"> 1. Remove the 2 screws.

Part	Figure	Description
Clutch Assembly (continued)		<ol style="list-style-type: none"> 1. Separate the top cover assembly by lifting and pushing ahead the top part of the assembly 2. Remove the 2 screws holding the panel control Separate all the wires connected to the housing.
		<ol style="list-style-type: none"> 3. Remove the 4 screws fixing the tub-cover and separate the tub-cover.
		<ol style="list-style-type: none"> 4. Separate the pulsator-cap by inserting the tip of a (-) screwdriver between the pulsator-cap and the pulsator and then lifting the screwdriver up (↑).
		<ol style="list-style-type: none"> 5. Remove the bolt holding the pulsator with a 10mm wrench.

Part	Figure	Description
Clutch Assembly (continued)		<p>6. Remove the shaft with the jig wrench.</p> <ul style="list-style-type: none"> - Release the nut in a clockwise direction. - Fasten the nut in a counterclockwise direction.
		<p>7. Place the main body so that the front frame faces upward and remove the 4 bolts holding the saddle with a 10mm wrench.</p> <p><input checked="" type="checkbox"/> When you place the washer on the floor, take care that you do not damage or scratch the product.</p>
		<p>8. Remove the bolt holding the DD-motor housing with a 17mm wrench and then remove the motor housing.</p>
		<p>9. Remove the 6 bolts holding the DD-motor with a 10mm wrench.</p>

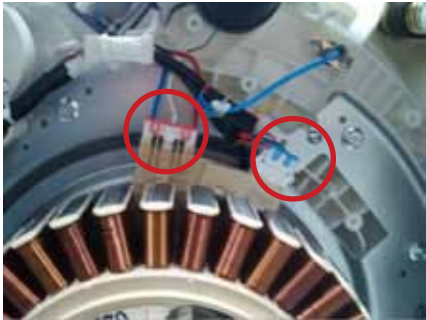Part	Figure	Description
Clutch Assembly (continued)		<p>10. Separate the 2 marked housings and then remove the DD-motor. 11. Press the hook to separate the housing.</p>
		<p>12. Separate the slide guide and the coupling by pulling them forward. Disassemble the coupling and the spring.</p>

Part	Figure	Description
		13. Remove the all screws fixing the clutch assembly and then separate the clutch assembly.

Reassembly procedures are in the reverse order of disassembly procedures.

4. TROUBLESHOOTING

4-1. INFORMATION MODES

► This is a washer integrated information mode. For detailed information, refer to the general repair scripts.

Check Type	For USA	Causes	Remarks
Water Level Sensor	1C	<ul style="list-style-type: none"> - The part of the hose where the water level sensor is located is damaged (punctured). - The hose is clogged with foreign material. - The hose is folded. - Too much lubricant has been applied to the insertion part of the air hose. - Hose engagement Check. (disengaged) - Part fault. (Faulty internal soldering) - The water level sensor terminal is disengaged. - Main PBA fault. 	
Motor Driving Check and Hall Sensor Check	3C	<ul style="list-style-type: none"> - The PBA connector terminal is not connected. - The motor spin net is not engaged. - The motor's internal coil is damaged. (short-circuited or cut) - The hall sensor terminal is not connected. - Foreign material (a screw) has entered the motor. - Motor overloaded due to too much laundry. (Non-sensing) - The motor hall sensor terminal is not connected. - PBA fault. - The motor driving Check from the PBA is weak. Unstable relay operation, etc. - This occurs due to erroneous operating signals from the motor hall sensor. - The IPM terminal of the main PBA is not connected. - The DD motor cover is out of place. - The PCB housing terminal is not connected. - PBA fault. - DD motor fault. 	<p>This Check occurs because of restrained revolutions.</p> <p>This Check occurs when an interference is generated due to too much laundry, etc.</p>
Water Supply Check	4C	<ul style="list-style-type: none"> - Foreign material is entering the water supply valve. - The water supply valve terminal is not connected. (Wire disconnected) - The warm water and rinse connectors are wrongly connected to each other. - This occurs if the PCB terminal from the drain hose to the detergent drawer is not connected. Check whether the transparent hose is folded or torn. 	
	4C2	<ul style="list-style-type: none"> - The cold and warm water supply hoses are wrongly engaged into each other. - The temperature of the water supplied through the dry valve during a dry cycle is sensed as higher than 70 °C. - The water temperature is sensed as higher than 50 °C in the Wool or Lingerie courses. 	The water supplied for 1 minute drying the drying cycle is 0.3 ~ 0.4 L.
Drain Check	5C	<ul style="list-style-type: none"> - The pump motor impeller is damaged internally. - The wrong voltage is supplied to the parts. - Part fault. - This occurs due to freezing in the winter season. - The drain hose is clogged. (Injection Check, foreign material) - Clogged with foreign material. - The water pump terminal is not connected: rubber band, bills, cotton, hair pins, coins have collected inside the drain pump ASSY. 	




Check Type	For USA	Causes	Remarks
Power Check	9C1,9C2	<ul style="list-style-type: none"> - Check the consumer's power conditions. <ul style="list-style-type: none"> : Make sure to check the operating voltage. Connect a tester to the internal power terminals during the Boil or Dry operations and observe the washing machine's operation carefully. : Check the voltages. (An Check occurs when under or over voltage is supplied.) : Check whether a plug receptacle is used. When the connecting wire is 1m, a momentary low voltage may drop up to 10 V - Main PBA fault (sometimes) 	
Communication Check	AC	<ul style="list-style-type: none"> - The signals between the sub and main PBAs are not sensed because of communication Check. - Check the connector connections between the sub and main PBAs carefully. <ul style="list-style-type: none"> → Check for incorrect or loose connections, etc. - Remove the sub PBA C/Panel and check for any faulty soldering. 	
	AC2	<ul style="list-style-type: none"> - The diagnosis of the I/O Board communication check. 	
	AC3	<ul style="list-style-type: none"> - The signals between The DR Module and main PBAs are not sensed because of communication Check. - Check The connector connections between The DR Module and main PBAs carefully. <ul style="list-style-type: none"> → Check for incorrect or loose connections, etc. - Remove The DR Module and Check for any faulty soldering. 	
	AC4	<ul style="list-style-type: none"> - The signals between The WIFI Module and main PBAs are not sensed because of communication Check. - Check The connector connections between The WIFI Module and main PBAs carefully. <ul style="list-style-type: none"> → Check for incorrect or loose connections, etc. - Remove the WIFI Module and Check for any faulty soldering. 	
	AC5	<ul style="list-style-type: none"> - The signals between The LCD Module and main PBAs are not sensed because of communication Check. - Check The connector connections between The LCD Module and main PBAs carefully. <ul style="list-style-type: none"> → Check for incorrect or loose connections, etc. - Remove The LCD Module and Check for any faulty soldering. 	
	AC6	<ul style="list-style-type: none"> - The signals between the Inverter PBA and main PBA are not sensed because of communication Check. - Check The connector connections between the Inverter PBA and main PBA carefully. <ul style="list-style-type: none"> → Check for incorrect or loose connections, etc. - Remove the Inverter PBA and Check for any faulty soldering. 	
Switch Check (Main Relay Check)	BC2	<ul style="list-style-type: none"> - The Power button is pressed continually. (for more than 12 seconds). - A switch is jammed or stuck due to be pressed unevenly due to deformation of the control panel or button. - This Check may occur when the screws that hold the sub PBA in place are tightened too much. - A button other than the Power button is continually pressed. (for more than 30 seconds). - Deformation of an internal plastic injection part. - A screw for assembling the sub PBA is tightened too much. 	



Check Type	For USA	Causes	Remarks
Door Check	DC	<ul style="list-style-type: none"> - A switch contact Check because of a deformation of the door hook. - When the door is pulled by force. 	When the door is not opened after the door open operation.
		<ul style="list-style-type: none"> - This occurs in the Boil wash because the door is pushed due to a pressure difference from internal temperature changes. 	When the door is not locked after the door close operation.
	DC1	<ul style="list-style-type: none"> - The door lock switch terminal is connected incorrectly. - The door lock switch terminal is broken. - This occurs intermittently because of an electric wire leakage - Main PCB fault. 	
	DC2	<ul style="list-style-type: none"> - This occurs if the Power switch is turned on/off continually and too much heat is generated (This check is difficult to be reproduced.) 	
Heater Check	HC HC1 HC2	<ul style="list-style-type: none"> - The washing heater is short-circuited or has a wire disconnected. - The washing heater in the tub has an Check. (Contact Check, temperature sensor fault) - If the water level sensor operates without water because water is frozen or for any other reason and the temperature sensor engaged at the bottom to prevent overheating for the washing heater detects a temperature of 100 to 150 °C, the washing machine turns the input power off. - The drying heater is short-circuited or has a wire disconnected. 	If the heater has no Check, this occurs because of a PBA relay malfunction.
Water Leakage Check	LC LC1	<ul style="list-style-type: none"> - Heater engagement fault. (out of place) - The air hose is out of place and water leakage occurs during the spin cycle. - The tub back at the safety bolts fixing part is broken. - Water leakage occurs at the front with foaming because of too much detergent. - Water leakage occurs because the connecting hose to the detergent drawer is connected incorrectly. - The drain pump filter cover is engaged incorrectly. - Water leakage occurs at the drain hose. - The duct condensing holding screws are worn. - The nozzle-diaphragm is engaged in the opposite direction or the rubber packaging is omitted. - Water leakage occurs because the screws that hold the tub back and front in place are fastened incorrectly. - The leakage sensor is faulty. 	
Overflow Check	OC	<ul style="list-style-type: none"> - Water is supplied continually because the water level detection does not work. - Because the drain hose is clogged and there is an injection Check (at a narrow section), the water level detection does not work and water is supplied continually. - Water is supplied continually because of freezing or because there is foreign material in the water supply valve. - This Check may occur when the water level sensor is degraded. 	This Check occurs because the water level sensor terminal is out of place.
Temperature Sensor Check	TC1 TC2	<ul style="list-style-type: none"> - The washing heater sensor in the tub has an Check. (Contact Check or temperature sensor fault) - The connector is connected incorrectly or is disconnected. - If the water level sensor operates without water because the water is frozen or for any other reason and the temperature sensor engaged at the bottom to prevent overheating for the washing heater detects a temperature of 100 to 150 °C, the washing machine turns the input power off. 	Heater sensor fault : When the connector is connected incorrectly or has a wire disconnected or contact Check
	TC4	<ul style="list-style-type: none"> - IPM temperature is abnormally high. 	
Unbalance Check	UB	<ul style="list-style-type: none"> - As laundry causes this Check, check the laundry. - Find the reason for the unbalance and solve it as directed in the user manual. 	


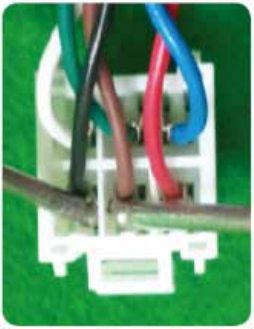


Check Type	For USA	Causes	Remarks
Foaming Detected	SUD	<ul style="list-style-type: none"> - This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds. “Sud” or “SUdS” is displayed when too much foaming is detected and “End” is displayed when the removal of the foaming is finished. (This is one of the normal operations. It is an Check for preventing non-sensing faults.) 	
Mems PBA Check Detected	8C1	<ul style="list-style-type: none"> - Check detected in the Mems PBA or data Check detected. Check the wire connections. 	
	8C2	Replace if necessary. <ol style="list-style-type: none"> 1. Check the wire connections. 2. Replace the Mems PBA. 3. Main PBA wire connection Check or PBA's silver nano part malfunction. Replace if necessary. 	
	8C		
Clutch motor	PC	<ul style="list-style-type: none"> - When position of the clutch can't be detected. 	
Clutch sensor	PC1	<ul style="list-style-type: none"> - After position of the clutch is detected, if the signal of the clutch hall goes wrong, occurs error. 	
System Check	SF1	<ul style="list-style-type: none"> - Micro Controller Operation Fail. 	Replace Assy PCB.
	SF2		
	SF3		

4-2. CORRECTIVE ACTIONS FOR EACH CHECK CODE

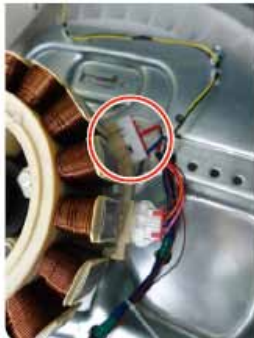► These are common troubleshooting procedures for each drum-type washer Check mode. For detailed information, refer to the general repair scripts.

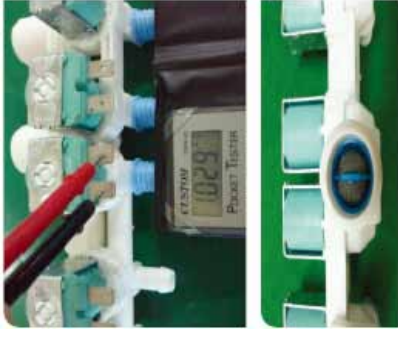Symptom	Check Code	Countermeasure	Troubleshooting Procedure	Measurement Picture
Water Level Sensor	► 1C	Check if the water level sensor is defective.	<ul style="list-style-type: none"> • Check the water level sensor terminal connections. • Check the part code of the water level sensor, because if an incorrect part is used, an abnormal operation may occur. (Abnormal operation) • If the water level sensor is defective, replace it. • If no problems were found for all of the procedures above, replace the PBA. 	<p>► Check the water level sensor frequency.</p> <p>1. Check it after the water level sensor and the connector are connected.</p> <p> Checking Part : Blue Color Wire Orange Color Wire</p> <p>2. Frequency: Approx. 26.4 KHz without water (Min 25.9KHz)</p> 
		Check if the water level sensor terminal is properly connected.		
		Check if the water level sensor hose is broken.		
		This may occur when the main PCB is defective.		
Washing Motor Defect	► 3C	This may occur when the washing motor is defective.	<ul style="list-style-type: none"> • Check the motor connector terminal connections. • Check if the Motor Cover State is damaged. • Check if the coil is broken due to moisture from any alien substance. • If the PBA control circuit is defective, replace the PBA. 	<p>► Check the motor Winding Coil</p> <ul style="list-style-type: none"> • Plug out the connector and read resistances at any two of the three terminals on Motor : Should be 19.3Ω (at 25oC) 
		Check if the washing Motor Rotor/State is defective or not.		
		This may occur when the main PCB is defective.		



Check Type	Check Mode	Causes	Corrective Actions	Description of Photo		
Water Supply Check	▶ 4C	This may occur when the water supply valve is defective.	<ul style="list-style-type: none"> If the water supply valve is broken, replace the valve. Check if the water supply is blocked due to an alien substance in the valve or check if the water is supplied to the machine. If a problem is found, take the appropriate countermeasure. Check if the water supply is blocked due to the water being frozen. If the PBA Relay malfunctions, replace the PBA. 	 <ol style="list-style-type: none"> Measure the resistance of the water supply valve. Resistance : 0.9KΩ to 1.1KΩ Check whether there is foreign material in the Water supply valve filter. 		
		This may occur when the main PCB is defective.			<ul style="list-style-type: none"> Check if there is any alien substance inside the draining pump motor. Check the natural drain in the same manner. Check if there are any incorrect connections or broken wires. If the machine malfunctions intermittently when the wash tub water temperature is high, replace the pump. If the motor stops due to the water being frozen in winter, remove the frozen water referring to the relevant repair procedures. 	 <p>Check the drain pump resistance. (Resistance : 13.5 ~ 16.5 Ω)</p>
		This may occur due to frozen water.				
Drain Check	▶ 5C	This may occur when the drain pump is defective.	<ul style="list-style-type: none"> Check the wire connections and terminal contacts between the sub and main PBAs. Check for disconnected wires. Check whether the sub PBA is short-circuited because of moisture. If the main PBA's communication circuit is faulty, replace it. 			
		This may occur due to frozen water.				
		Check if there is any alien substance inside the draining pump.				
Communication Check	▶ AC	This may occur when the main PCB is defective.	<ul style="list-style-type: none"> Check the wire connections and terminal contacts between the sub and main PBAs. Check for disconnected wires. Check whether the sub PBA is short-circuited because of moisture. If the main PBA's communication circuit is faulty, replace it. 			
		The signals between the sub and main PBAs are not sensed.				
		Incorrect wire connections between the sub and main PBAs.				

Symptom	Check Code	Countermeasure	Troubleshooting Procedure	Measurement Picture
Door Check	▲ DC	This may occur when the door switch is defective. This may occur when the main PCB is defective.	<ul style="list-style-type: none"> • Check if a dE Check occurs during the boiling course. • As this Check occurs because the door is opened, close the door. • Since 120V power is connected, check if the power cord is disconnected or check the insulation status and repair it if necessary. • If the main PBA door detection circuit is defective, replace it. 	<ol style="list-style-type: none"> 1. Check the resistance for Reed SW (Checking Part : White-Green Wire) <ul style="list-style-type: none"> - Resistance: Approx 0.2Ω between the terminals of Reed SW. 
				<ol style="list-style-type: none"> 2. Check the resistance for Motor (Checking Part : Black-Brown Wire) <ul style="list-style-type: none"> - Resistance: 33Ω to 46Ω between the terminals of Motor. 
Switch Check (Main Relay Check)	▲ DC1 DC2	The door lock switch unit is not inserted. The door lock switch unit is damaged. The wire is disconnected. The door lock switch unit is defective. This may occur due to a defect of the main PCB.	<ul style="list-style-type: none"> • Check whether the door lock switch unit is inserted. • Check whether the door lock switch unit is damaged. • Check the disconnection of the wire. • If the door lock switch unit is defective, replace it. • If the main PCB is defective, replace it. 	<ol style="list-style-type: none"> 3. Check the resistance for Lock/Unlock Contact (Checking Part : Lock White-Red Wire Unlock White-Blue Wire) <ul style="list-style-type: none"> - Resistance: Resistance: Approx 0.2Ω between the terminals of Contact. 
				<p>☑ Check the Door Lock/Unlock state.</p> <p>Check the contact between the control panel buttons and their corresponding tact switch.</p> <ul style="list-style-type: none"> - There must be a gap between a control panel button and its corresponding micro switch.  <p>☑ Otherwise, an Check occurs after approx. 30 seconds has passed.</p>

Symptom	Check Code	Countermeasure	Troubleshooting Procedure	Measurement Picture
Water Leakage Check	▲ LC LC1	This may occur when an alien substance is in the DV Case.	<ul style="list-style-type: none"> Since this occurs when an alien substance is in the Draining Bellows, for natural draining, remove the alien substance. If the drain motor is defective, replace the motor. Check if the water leaks from the tub connection part. 	<p>Check if there is any alien substance in the Draining Bellows. <input checked="" type="checkbox"/> Check if there is any alien substance such as underwear wire, coins, etc.</p>
		This may occur due to a defect of the product's internal hose or from the part assembly.		
Unbalance Check	▲ UB	This may occur due to the laundry being unevenly distributed.	<ul style="list-style-type: none"> Check the laundry type and check if the laundry load is unbalanced. <ul style="list-style-type: none"> - Make sure to check if there is any laundry present that absorbs a lot of water even if its volume is small and explain the problem comprehensively, if necessary. 	-
Mems PBA Detected	▲ 8C ▲ 8C1 ▲ 8C2	This may occur due to disconnection.	<ul style="list-style-type: none"> Check wire connections. 	-
		This may occur when the Mems PBA is defective.	<ul style="list-style-type: none"> Replace the Mems PBA. Replace Mems PBA because of the main PBA wire disconnection Check or PBA silver nano part malfunction. 	-
Overflow Check	▲ OC	This may occur when the water level sensor is defective.	<ul style="list-style-type: none"> The water level sensor is replaced. 	-
		This may occur when water is supplied continuously due to freezing or foreign materials in the water supply valve.		-

Symptom	Check Code	Countermeasure	Troubleshooting Procedure	Measurement Picture
Heater Check	<ul style="list-style-type: none"> ▶ HC HC1 	<ul style="list-style-type: none"> • Disconnection wire • Heater fault • Wash-thermistor fault 	<ul style="list-style-type: none"> • Check for connection between wire and heater. • If wash heater is faulty, replace it. <ul style="list-style-type: none"> - Refer the TYPE 1 • If it is not problem in heater, replace wash-thermistor <ul style="list-style-type: none"> - Refer the TYPE 2 	-
Temperature Sensor Check	<ul style="list-style-type: none"> ▶ TC1 TC2 TC3 TC4 	<ul style="list-style-type: none"> • Washing temperature sensor fault • Dry temperature sensor fault • Faulty and incorrect connections of the dry condensing sensor • Main PCB fault • Freezing in the winter season • IPM temperature is abnormally high. 	<ul style="list-style-type: none"> • Check the connections for the washing heater temperature sensor connector. • If the washing heater temperature sensor has a functional error, replace it. <ul style="list-style-type: none"> - A TC1 check occurs. • Check the connections for the dry heater temperature sensor connector. • If the dry heater temperature sensor has a functional check, replace it. <ul style="list-style-type: none"> - A TC2 check occurs. 	-
Power Check	<ul style="list-style-type: none"> ▶ UC (9C1/9C2) 	<ul style="list-style-type: none"> • Power condition fault. • An check occurs when under or over voltage is supplied. • plug receptacle is used • Main PBA fault (sometimes) 	<ul style="list-style-type: none"> • Check the consumer's power conditions. <ul style="list-style-type: none"> : Make sure to check the operating voltage. • Connect a tester to the internal power terminals during the Boil or Dry operations and observe the washing machine's operation carefully. <ul style="list-style-type: none"> : Check the voltages. (A check occurs when under or over voltage is supplied.) : Check whether a plug receptacle is used. When the connecting wire is 1m, a momentary low voltage may drop up to 10 V • Main PBA fault (sometimes) 	-


4-3. THE INSTALLATION FOR LEVELING

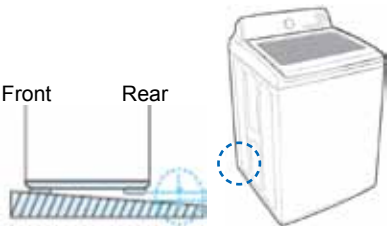Problem Type	Causes	Corrective Actions
<p>If the rear level of the floor is lower than the front level of the floor, it can't be leveled.</p>  <p>Front Rear</p>	<ul style="list-style-type: none">• Only use the front legs to adjust the level.	<ul style="list-style-type: none">• Use the leg supports to adjust the level of the rear.• If the floor is on a steeply slope, please use the additional leg supports.  <ul style="list-style-type: none">• Customer can purchase the leg supports from a service center.

5. PCB DIAGRAM

5-1. MAIN PCB

▶ This Document can not be used without Samsung's authorization.

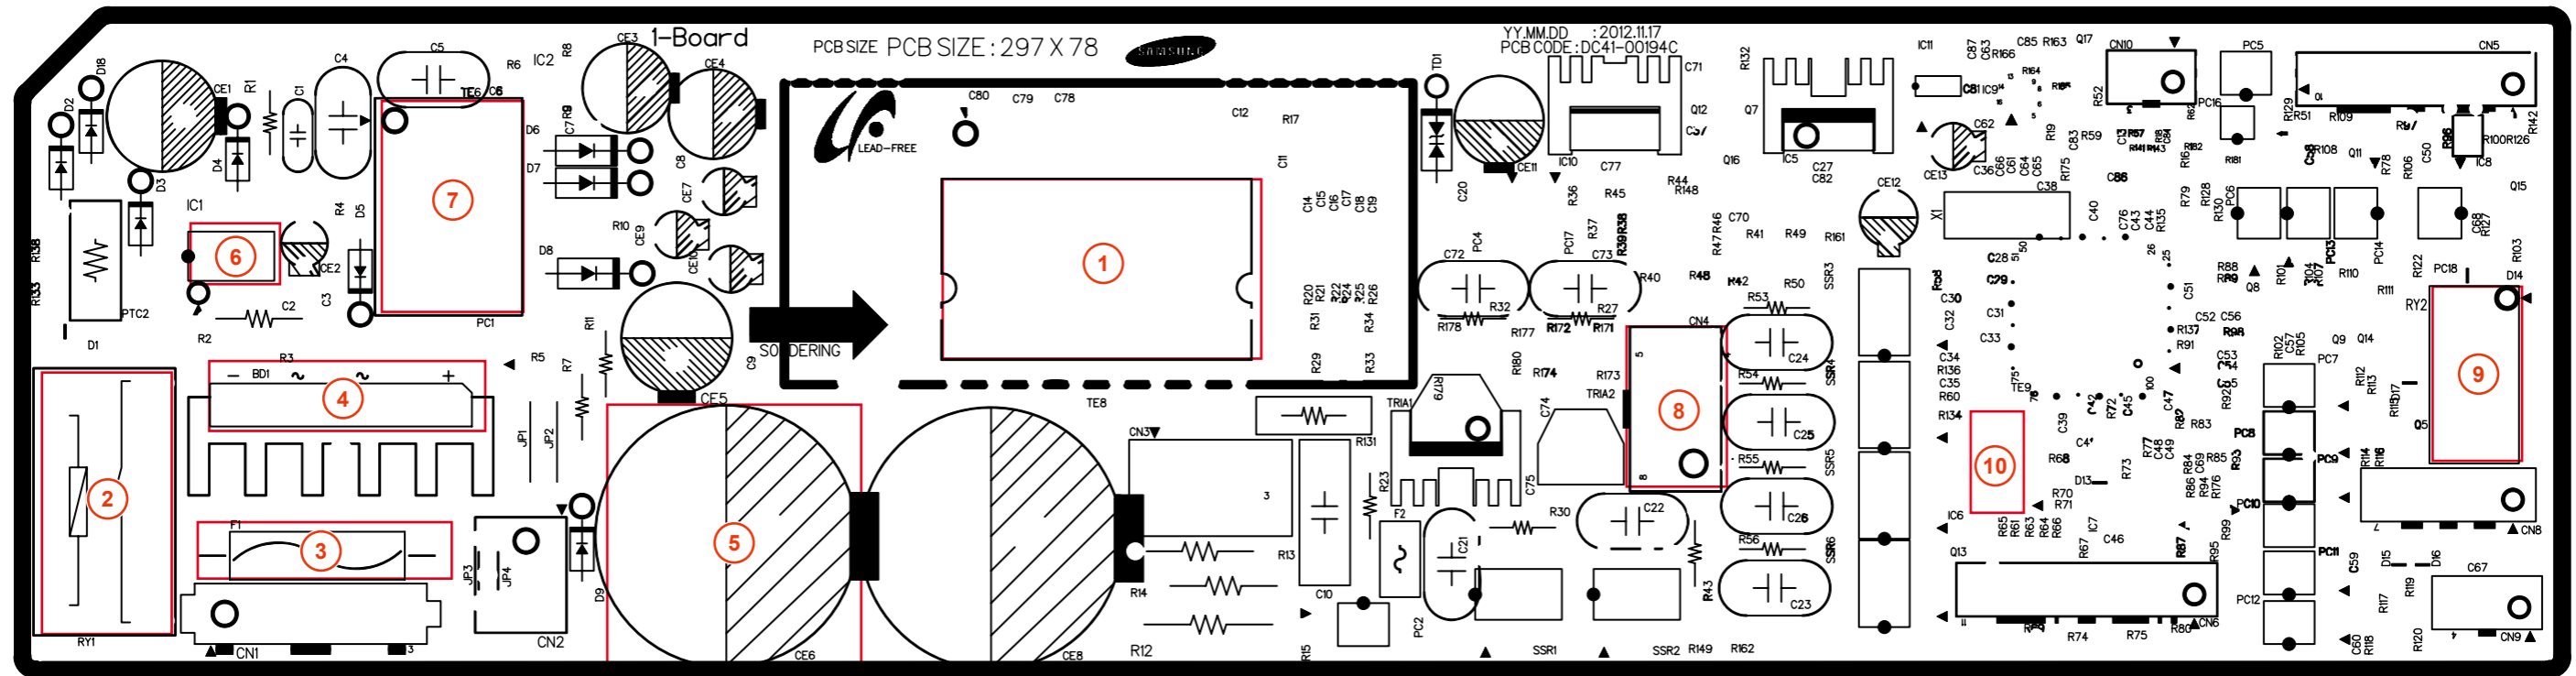


Location	Part No.	Function	Description
1	TE8	Motor Control	Control to Motor
2	RY1	Main Relay	Main Power Relay
3	F1	FUSE	Limit the Over-Current
4	BD1	Making DC Voltage	It works to Change the AC to the DC
5	CE6	Charging Voltage	Charge the DC LINK (300V)

Location	Part No.	Function	Description
6	IC1	Switching IC	Making a stable DC
7	TE6	Trans Circuit	Chopping the DC Link
8	SSR1~6 TRIAC1~2	Load Control	Turn ON/Off the Load(Valve etc.)
9	Q5,RY2	Door Lock Switch Driving Circuit	<ul style="list-style-type: none"> • Drive the Door Lock Switch • Toggle CW/CCW
10	IC6	Driving Circuit	Drive the SSR or Relay <ul style="list-style-type: none"> • Supply the Current to the Acting Current


5-2. DETAILED MANUAL FOR CONNECTOR AND RELAY TERMINAL PART - MAIN PCB

► This Document can not be used without Samsung's authorization.

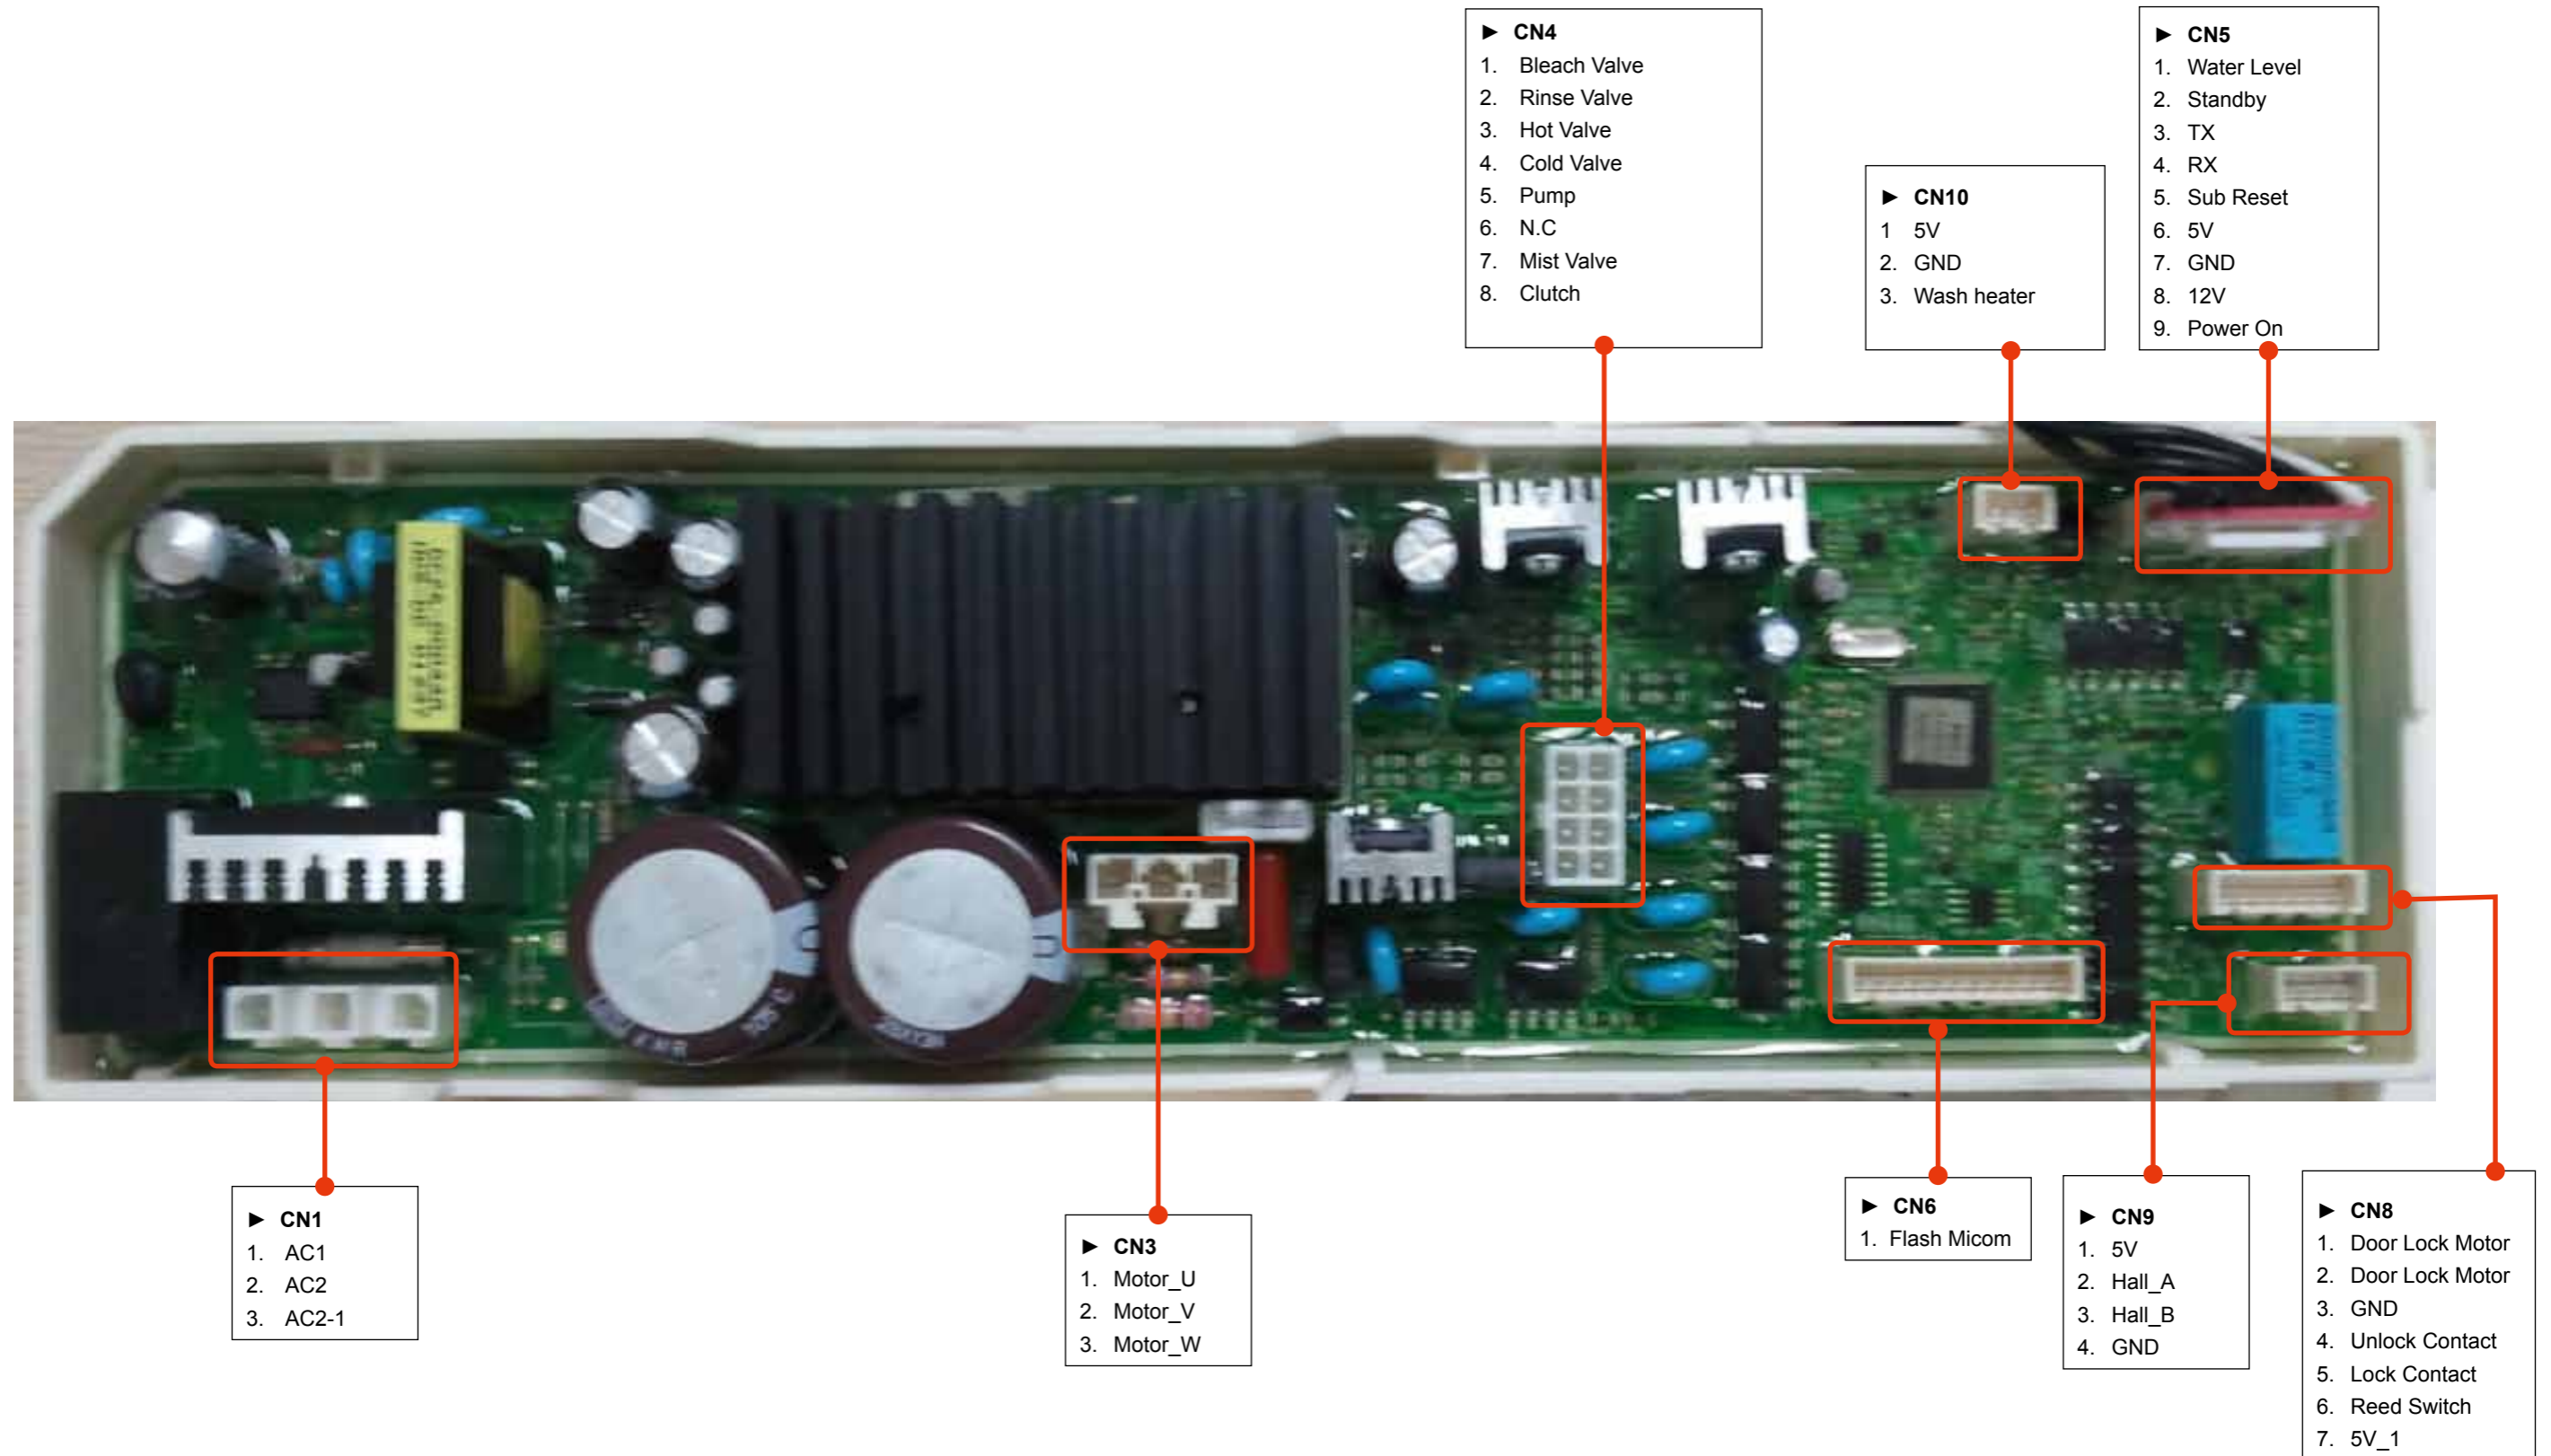

5-3. SUB PCB

▶ This Document can not be used without Samsung's authorization.

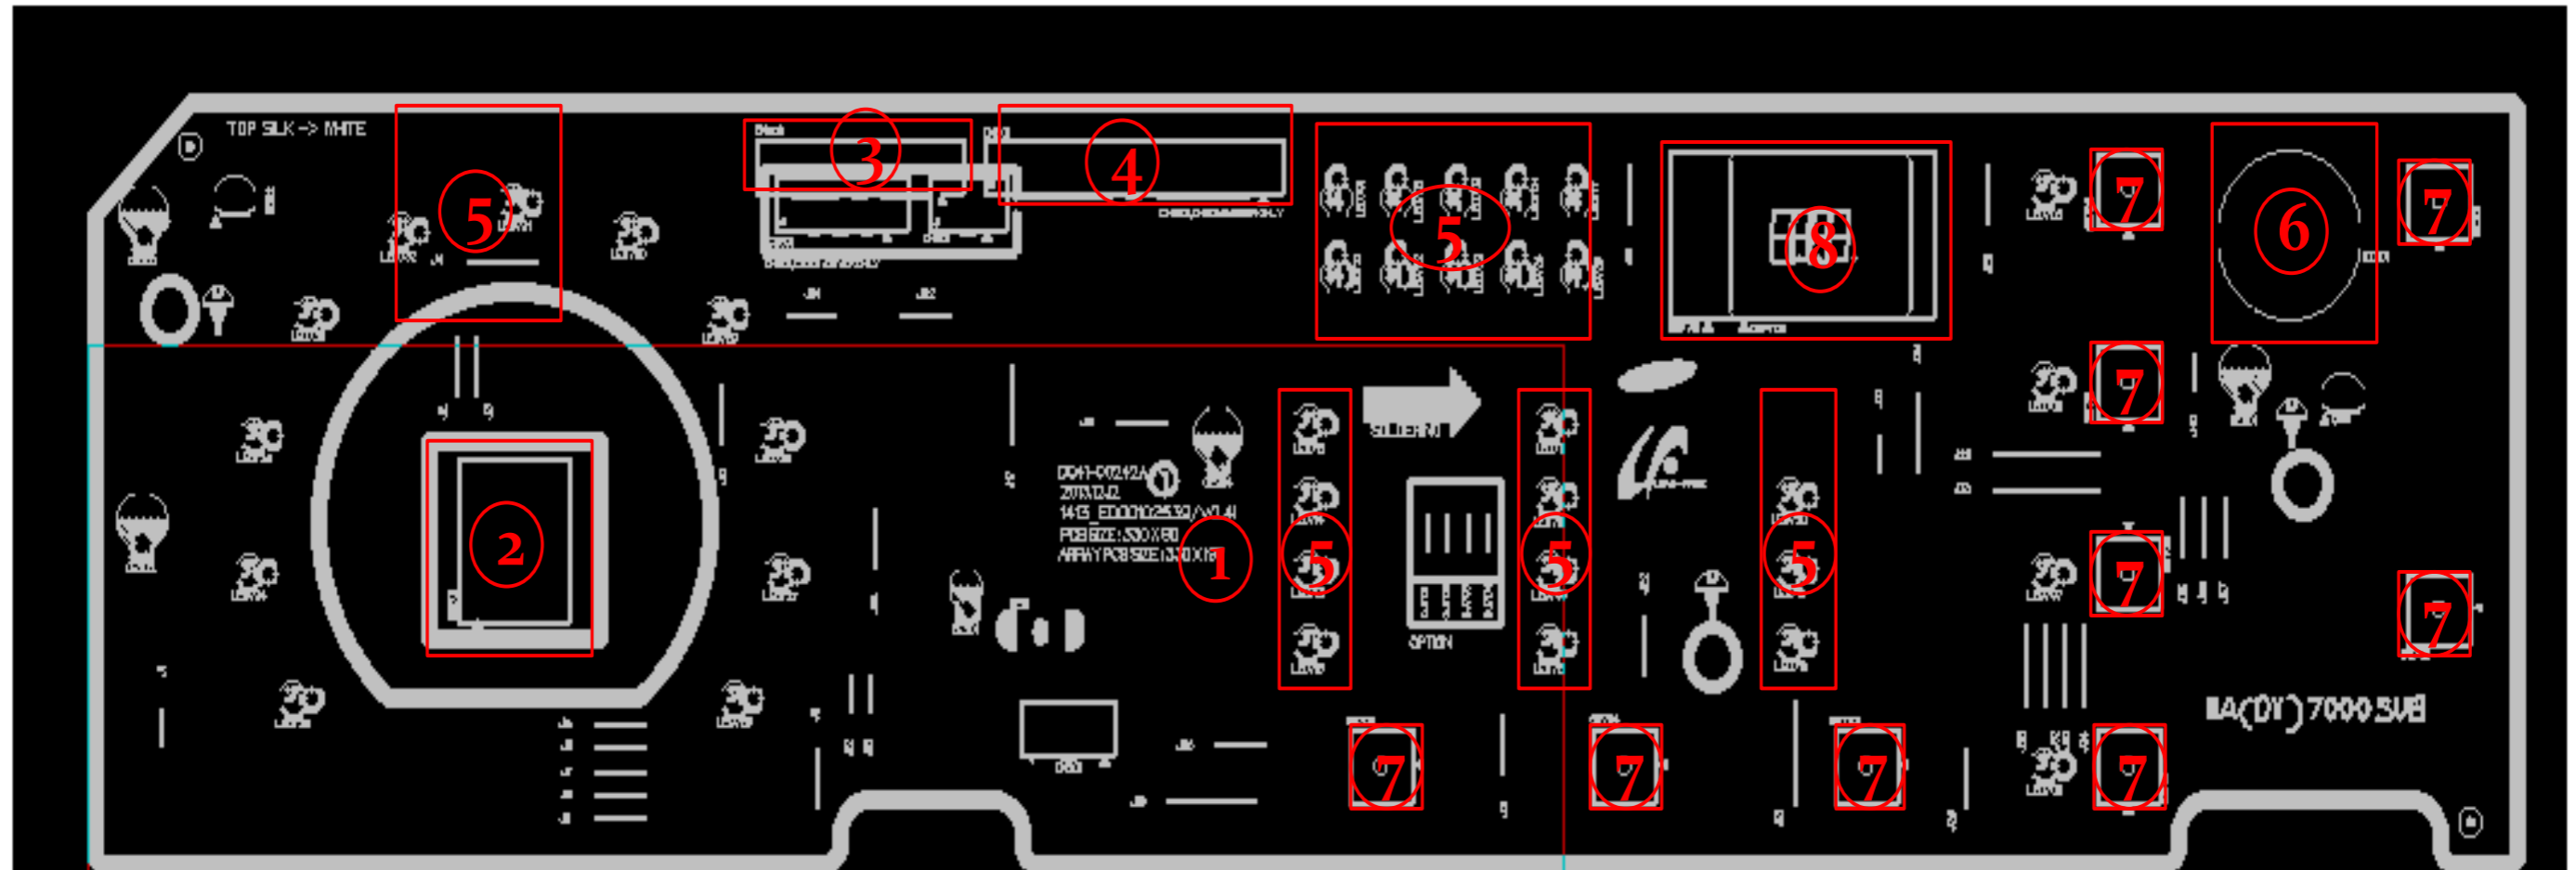

Location	Part No.	Function	Description
1	Micom201	Control Function	Control Key and LED Function
2	SW601	Jog Dial	Jog Dial
3	CN802	Wash Communication Part	Connect wash Main PBA
4	CN501	Conecting Sensing Part	Connecting Thermistor, cluch, Water Level and MemS Sensor
5	LED	LED Lamp	Display Function
6	BZ601	Buzzer	Making a sound
7	SW701~SW708,SW201	Switch	Operating or changing Function
8	DSP701	LED Display	Display Funicton

5-4. DETAILED MANUAL FOR CONNECTOR TERMINAL PART - SUB PCB


▶ This Document can not be used without Samsung's authorization.

▶ **CN802**

1. CLUTH
2. WL_MAIN
3. STANDBY
4. TX
5. RX
6. RESET
7. 5V
8. GND
9. 12V
10. POWER_ON

▶ **CN501**

1. 3.3
2. SPC_1
3. SDI_1
4. SDO_1
5. GND
6. CS1_1
7. GND
8. WATER_THERM
9. CLUTCH_SEN
10. WATER_SEN1
11. WATER_SEN2
12. 5V
13. CLUTCH
- 14.
15. GND

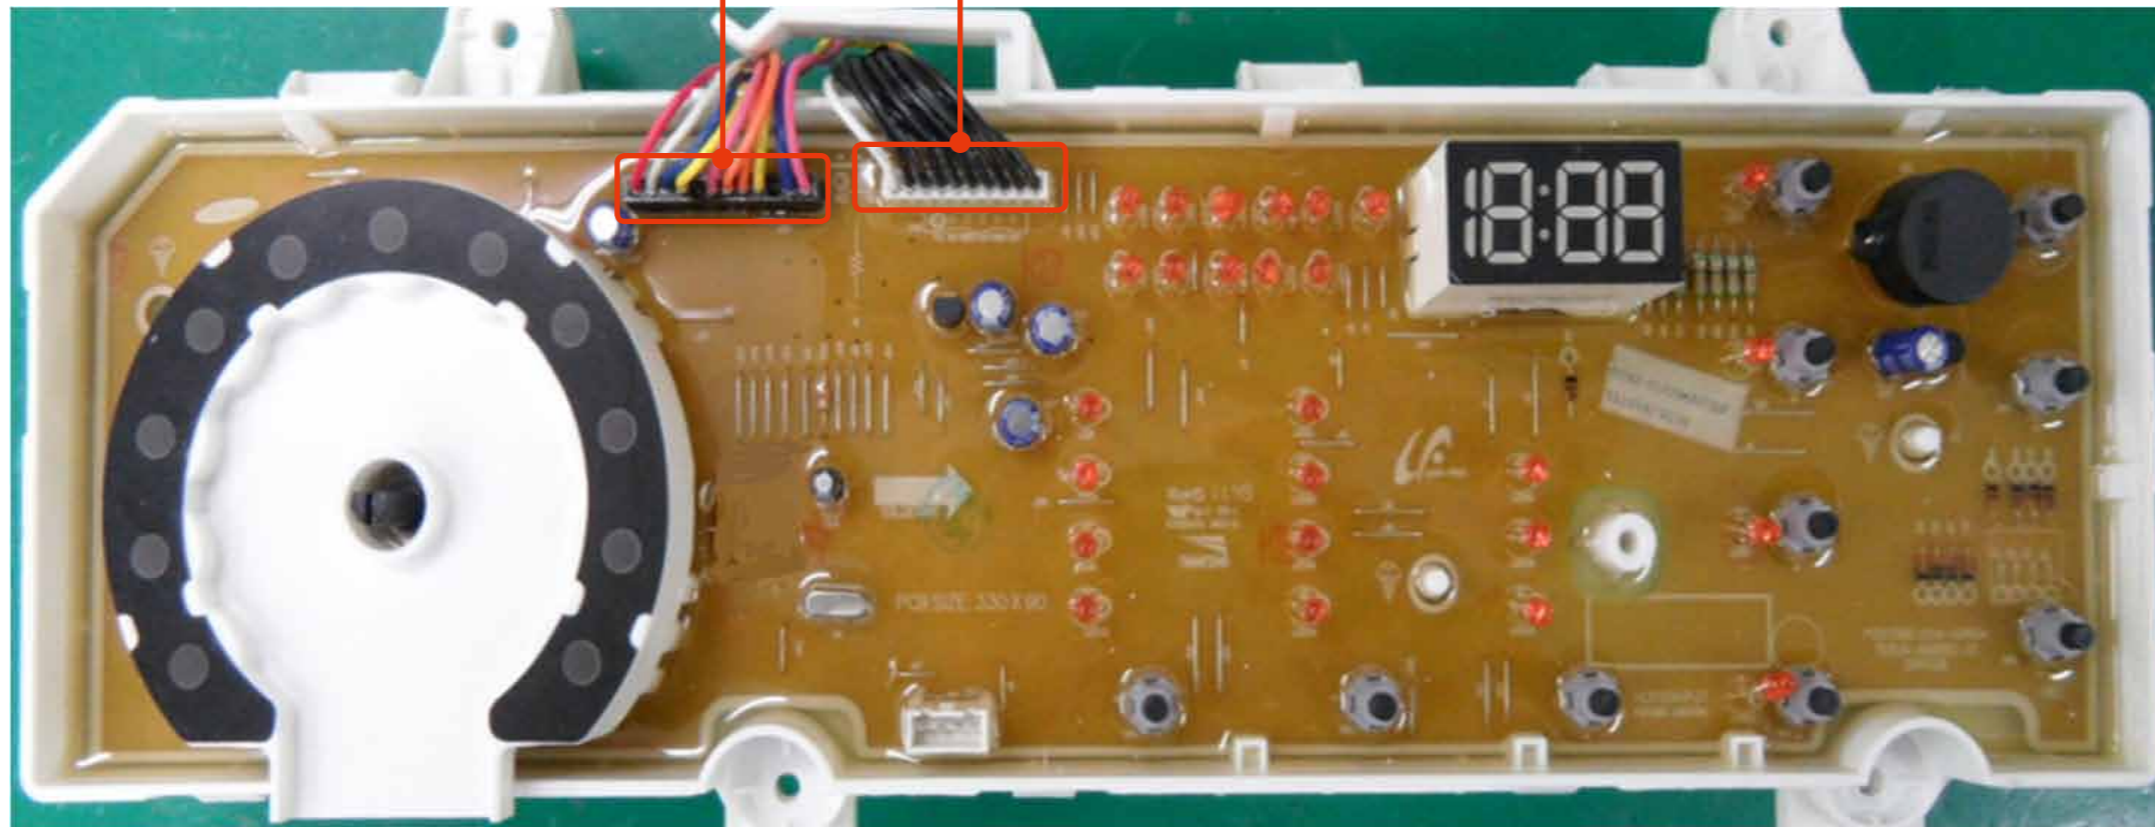


6. WIRING DIAGRAM

6-1. WIRING DIAGRAM

▶ This Document can not be used without Samsung's authorization.

● REFERENCE INFORMATION

BLK	BLACK
BLU	BLUE
GRN	GREEN
GRY	GRAY
NTR	NATURAL
ORG	ORANGE
PNK	PINK
RED	RED
SKYBLU	SKYBLUE
VIO	VIOLET
WHT	WHITE
YEL	YELLOW

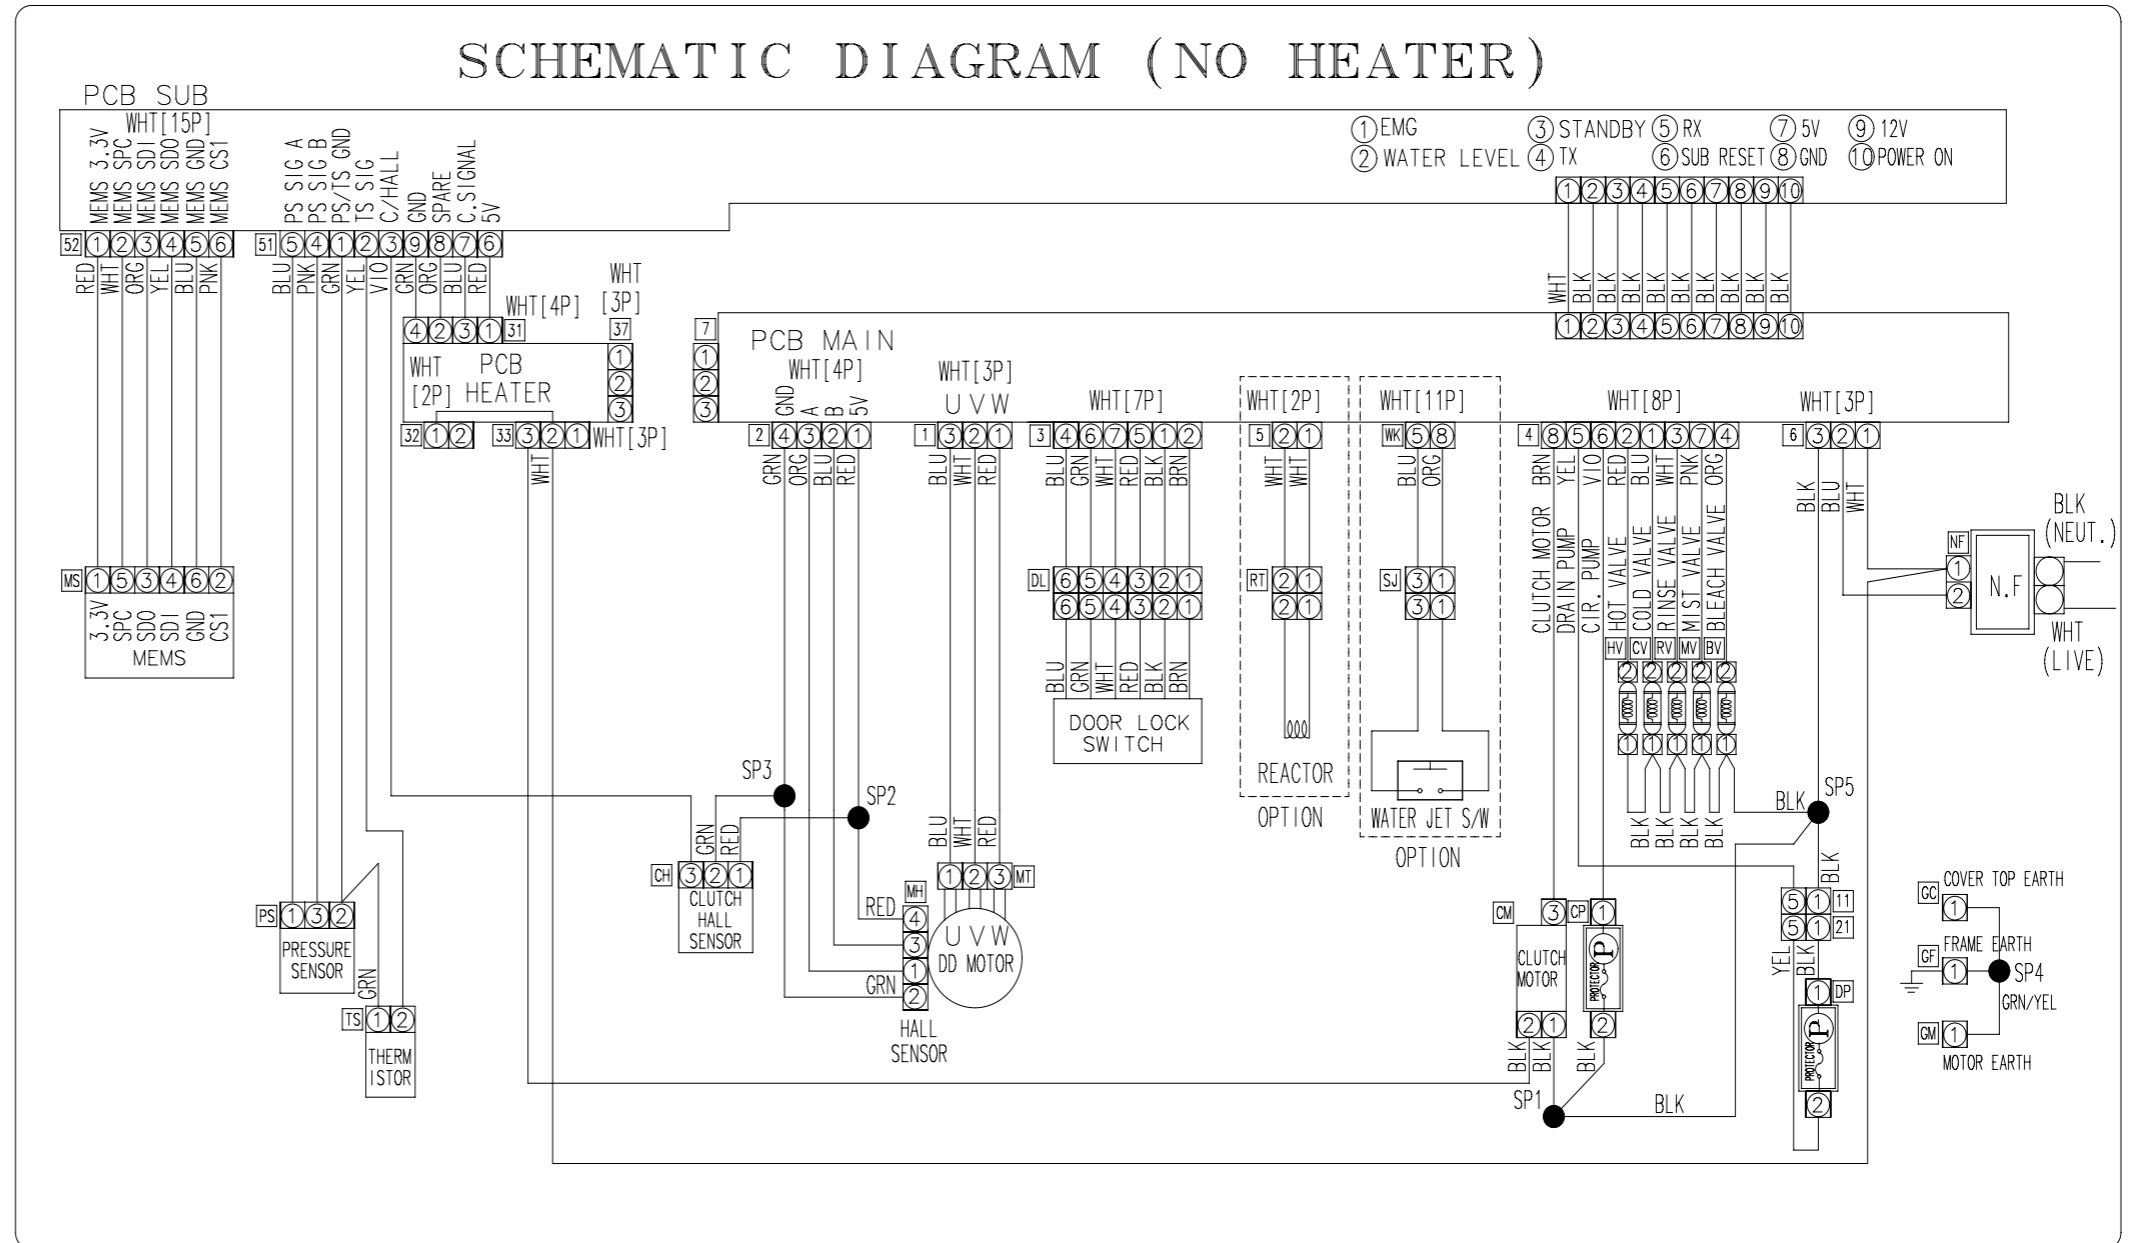

7. REFERENCE

7-1. MODEL NUMBER NAMING RULES

①		②		③		④		⑤			⑥		⑦		⑧		⑨	
Product Type		Capacity (by Market)		Intro. Year		Series		Feature Table			Intro. Region. or TYPE		Color				Buyer	
						Grade		F-Code 1	F-Code 2	F-Code 3		Color Code						
W	A	4	8	J	7	7	7	0	0	A	W	/	A	2				

① **Product type (CAN NOT CHANGE)** : Auto Washing machine (SAMSUNG' s Guide Line)

② **Market Claim Capacity** : 5.2 cu.ft

③ **Intro. Year** : J - Intro.Year: 2015

④ **Series** : Grade 7 : High

⑤ **Feature Table** : 7 : Premium/Hot-Cold water
 0 : Inverter Motor 7 : Inverter Motor/Activ Dual Wash
 0 : Drain Pump

⑥ **Intro. Region, or TYPE** : A - N.America

⑦ **Color** : P - INOX
 W - WHITE

⑧ / : CBU

⑨ **Buyer** : A2 : USA



This Service Manual is a property of Samsung Electronics Co.,Ltd.
Any unauthorized use of Manual can be punished under applicable
International and/or domestic law.

© 2015 Samsung Electronics Co.,Ltd. All
rights reserved.

16 FEB. 2015